


Hearing aid controls - programmes and volume

Your hearing aid has a push button on the back that enables you to change the volume and the programme depending on the situation you are in.

The push button can be activated by tapping on either:

the upper part (UP) or

the lower part (DOWN)

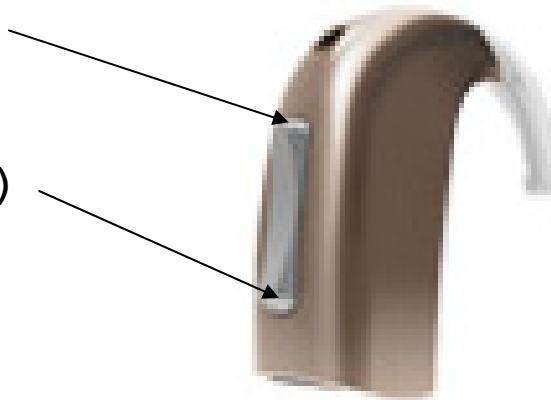

To change the volume

To **increase** the volume, **briefly** tap the **upper** part of the button. You will hear a short pip each time you tap it.

To **decrease** the volume, **briefly** tap the **lower** part of the button. You will hear a short pip each time you tap it.

When the hearing aid is switched on it will start at a mid/preferred volume. When adjusting the volume control back to the mid/preferred volume it is indicated by two short beeps.

To change the programmes

When switching between the different programmes, your hearing aid will beep.

One longer press will change the programme.

The number of beeps you hear after you let go will indicate the programme.

One beep – programme 1 - general

Two beeps – programme 2 - _____

Three beeps – programme 3 - _____

Be careful when trying to change programme that you do not accidentally change the volume instead. This will happen if you do not hold down the button long enough.